PRECAUTIONS

- Before making holes, check the mounting space with supplied template.
- To prevent noise pick-up, keep the wiring away from motors, highvoltage leads and other potential noise sources.
- To prevent a short-circuit, keep all wiring away from moving parts and sharp edges.
- Make sure you carefully read and understand the installation instructions before installing this subwoofer in your vehicle.



A8S

SUBWOOFER SPEAKER SYSTEM OWNER'S MANUAL Thank you for purchasing a **qwqve** Subwoofer Speaker. It is a state-of-the-art product specifically designed and engineered for vehicle use, and has been thoroughly tested to ensure consistent and reliable performance.

Should you have any questions regarding the installation or operation of your awave Subwoofer Speaker, which are not answered in this manual, please contact your dealer for assistance.


FEATURES


8" Subwoofer Speaker Rms.Power: 150W Stamped steel bracket Special non-pressed paper cone with rubber edge 2 ohm 2" Aluminum Voice Coil 58.5 Oz Magnet Structure

Diameter

External diameter	216.5mm/8,5inch
Installation diameter	183 mm 7,2 inch
Installation depth	126 mm 5,0 inch
Magnet diameter	120 mm 4,7 inch



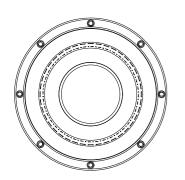

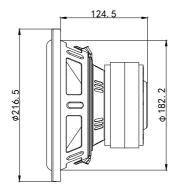

Speaker Specifications

Electrical Par Re	rameters 1.90 Ohm	Mechanical Parameters (using laser)
Le	0.749 mH	Mms
L2	1.166 mH	Mmd (Sd) 87.3 g
R2	4.93 Ohm	Rms 3.679 kg/s
Cmes	1701.46 μ F	Cms 0.109 mm/N
Lces	5.89 mH	Kms 9.18 N/mm
Res	14.69 Ohm	BI 7.351 N/A
fs	45 Hz	Lambda s 0.06

Loss factors		Other Parameters		
Qtp	0.925	Vas	9.9839 I	
Qms	7.897	n0	0.118 %	
Qes	1.032	Lm	82.93 dB	
Qts	0.913	Lnom	83.1 dB	

rmse Z	4.28 %	Series resist	or 0	Ohm
rmse Hx	2.79 %	Sd	254.47	cm2