

# BW4/BW4C/BW45C

**BMW Specific Speakers** 

User's Manual

### COMPATIBILITY

All BMW E/F/G models (except F15/F16 front door)

Compatibility depending on model and equipment. No liability assumed.

State of compatibility : January 2022

## **IMPORTANT NOTE**

This manual is an installation aid for professional installation of the sound system.

Please read the following notes:

•Please handle all parts of the sound system and the components of your vehicle with care.

•Under all circumstances observe the instructions of the vehicle manufacturer and do not make any changes to the vehicle which could impair driving safety.

•Be sure to pay attention to the correct polarity when connecting.

### INSTALLATION

- 1. Remove the handle bar , Pry out the handle of the door opener
- 2 Remove the screws from the handle , Loosen the two exposed screws
- Dismantling the door panel , Pry the door trim from the door panel , Carefully loosen the clips and trim , Now disconnect all the plugs that are connected to the door trim
- 4 Disassembly of the speakers, After removing the door panel, the speaker is freely accessible and can now be removed. To do this, remove the three screws and disconnect the cable.
- 5 Mounting the speakers , Connect the plug to the awave speaker , Now mount the awave speaker with the screws
- 6 Mount the door trim in reverse order.

#### SPECIFICATIONS

| Model              | BW4          |
|--------------------|--------------|
| Impedance          | 40hm         |
| Frequency response | 100-20KHz    |
| RMS Power          | 30W          |
| Max Power          | 60W          |
| RE                 | 3.0 Ohm      |
| SPL                | 85.9dB       |
| FS                 | 102Hz        |
| QMS                | 3.320        |
| QES                | 0.955        |
| QTS                | 0.742        |
| VAS                | 2.108 L      |
| MMS                | 4.285 g      |
| BL                 | 2.956 T      |
| CMS                | 558.987u M/N |
| No                 | 0.233%       |

| Model              | BW4C         |
|--------------------|--------------|
| Impedance          | 40hm         |
| Frequency response | 100-10KHz    |
| RMS Power          | 30W          |
| Max Power          | 60W          |
| RE                 | 3.0 Ohm      |
| SPL                | 85.7dB       |
| FS                 | 102Hz        |
| QMS                | 3.314        |
| QES                | 0.953        |
| QTS                | 0.74         |
| VAS                | 2.324 L      |
| MMS                | 4.575 g      |
| BL                 | 2.953 T      |
| CMS                | 558.982u M/N |
| No                 | 0.257%       |

#### **SPECIFICATIONS**

| Model              | BW45C        |
|--------------------|--------------|
| Impedance          | 40hm         |
| Frequency response | 100-12KHz    |
| RMS Power          | 30W          |
| Max Power          | 60W          |
| RE                 | 3.0 Ohm      |
| SPL                | 85.9dB       |
| FS                 | 101Hz        |
| QMS                | 3.583        |
| QES                | 1.060        |
| QTS                | 0.818        |
| VAS                | 2.598 L      |
| MMS                | 4.575 g      |
| BL                 | 2.867 T      |
| CMS                | 542.080u M/N |
| No                 | 0.245%       |

#### **Guarantee Note**

The products was under highly strict quality control while production, it should be maximized the performance of it's feature by proper using, but in order to protect the customer's benefits and maintain the reputation of the company, we guarantee that: with this "Guarantee Note", a free reparation is offered to the customer if any malfunction happened during 1 year that caused by production aircraft or the component itself.

|      | <br>, |
|------|-------|
| <br> | <br>、 |
| <br> | <br>` |
|      |       |
|      | 1     |
|      | 1     |
|      |       |
|      |       |
|      | ;     |
| <br> | <br>/ |
|      | <br>  |